

| ERGOFUNK | Reset of Lanab Group's electric stands

Version 1 / 2022.08.11

Ergofunk II & Ergofunk Smart

1. Push the table down to the bottom position.
2. When the table is in the bottom position, hold the down button for about 5 seconds (usually the table-top is visibly adjusted).
3. Reset is complete!

Ergofunk SE och Basic (current version from 2021)

1. Push the table down to the bottom position.
2. When the table is in the bottom position, hold the down button for about 5 seconds (usually the table-top is visibly adjusted).
3. Reset is complete!

Ergofunk SE (earlier version from may 2018 – 2021)

1. Lower the frame to its lowest position by pressing the down arrow on the hand control. Release the button.
2. Press the button again and keep it pressed for 10 seconds.
3. The reset is now carried out and the frame is ready to use!

Ergofunk SE (old version/before may 2018)

1. Press and hold both table control buttons (up and down buttons) until you hear a beep.
2. Then push the table top down to the bottom position (the table may go down slightly more slowly).
3. When the table is in the bottom position, press and hold the down button until you hear 3 beeps.
4. The reset is complete!